



# Ready to Assemble (RTA) Counter Assembly Instructions

Our RTA counters will take two people to assemble. Using less than two people may cause damage to the counters and injury to the assembler. You will need a Phillips screwdriver and a mallet hammer. Make sure metal tabs on each fastener are fully open. The metal portion of the fasteners should be perpendicular to the panels. This is very important for proper placement when fastening together.


**1** Put the base with toe kick on a flat surface.

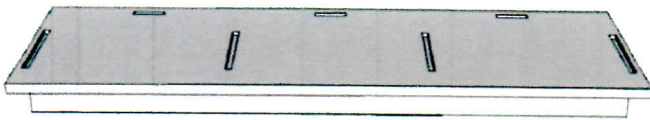


**2** Insert the middle panel and the end panels in the slots in the base. End panels have a cap for the corners to attach and holes drilled for shelves should be toward the center of the unit. Middle uprights have wiring notches toward the customer side of the counter.

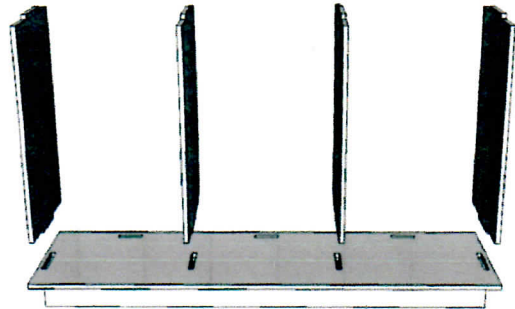

**3** Place the slatwall back panel in the slots on the base.

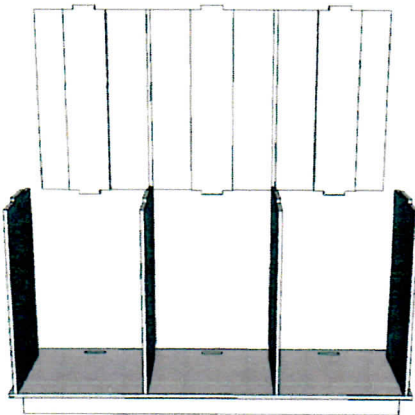

**4** Slide CornerForms down each corner.

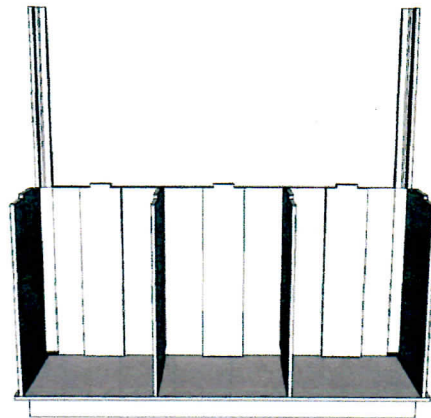


continued on back →

25315 74th Avenue South, Suite 102  
Kent, WA 98032  
800-433-7099 / 253-852-0203 • 253-852-0204 Fax  
spacewallwest.com • info@spacewallwest.com




*Outfitting the West With Slatwall Paneling*

- 5** Place the top so notches and holes fit together.

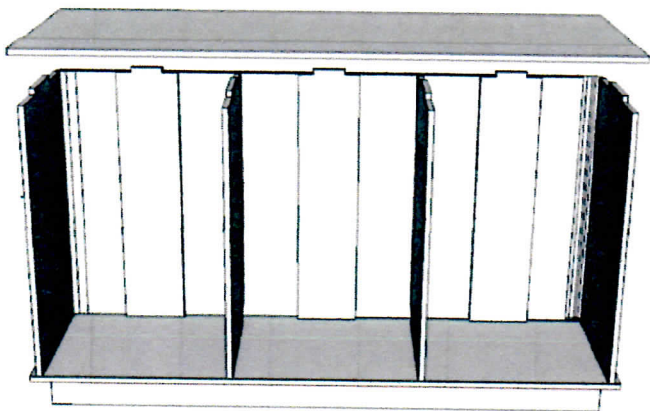

- 6** Close the fasteners all the way, being careful not to mar any surfaces.

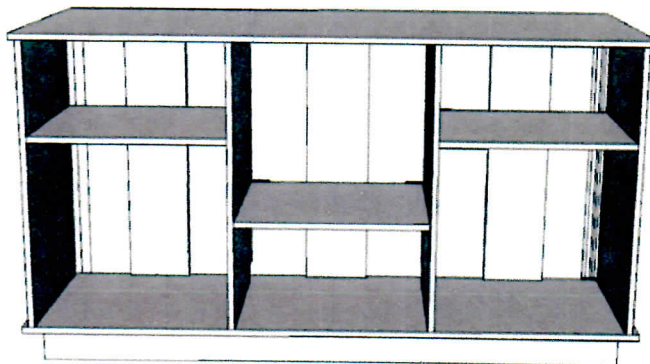

- 6** Insert miscellaneous drawers, shelves, pumpkin lids, etc.

For questions about installation, please call Spacewall West at 800-433-7099 or 253-852-0203.

25315 74th Avenue South, Suite 102  
Kent, WA 98032  
800-433-7099 / 253-852-0203 • 253-852-0204 Fax  
spacewallwest.com • info@spacewallwest.com



*Outfitting the West With Slatwall Paneling*